

Professional Easel - 700 Series

1. Open uprights by pushing down on back leg and securing with wingnuts. Attach top crossbar to uprights with carriage bolts and wingnuts.
2. Slide glides into upright channels and attach bottom crossbar with wingnuts.
3. Attach crossbar to back legs with carriage bolts and wingnuts.
4. Slide center support over top and bottom crossbar glides and tighten with wingnuts.
5. Attach metal feet to frame holder and utility tray, then slide into support channel and tighten.
6. Rotate palette holders if needed.
7. To adjust the angle of the easel, slightly loosen the upright-to-base wingnuts (A,B,C and D) and the rear wingnuts (E and F) connecting the front upright to the back upright. Gently pull or push the easel uprights to the desired angle, then retighten all the wingnuts to secure the angle of the easel.

