


Perfex Pedestal SignFrame - PA Series

1. Align bottom holes of upright with holes on base stem, then connect upright to base using the 2 slightly longer screws.
2. Use the two remaining screws to connect the frame to the upright.
3. Insert the graphic.

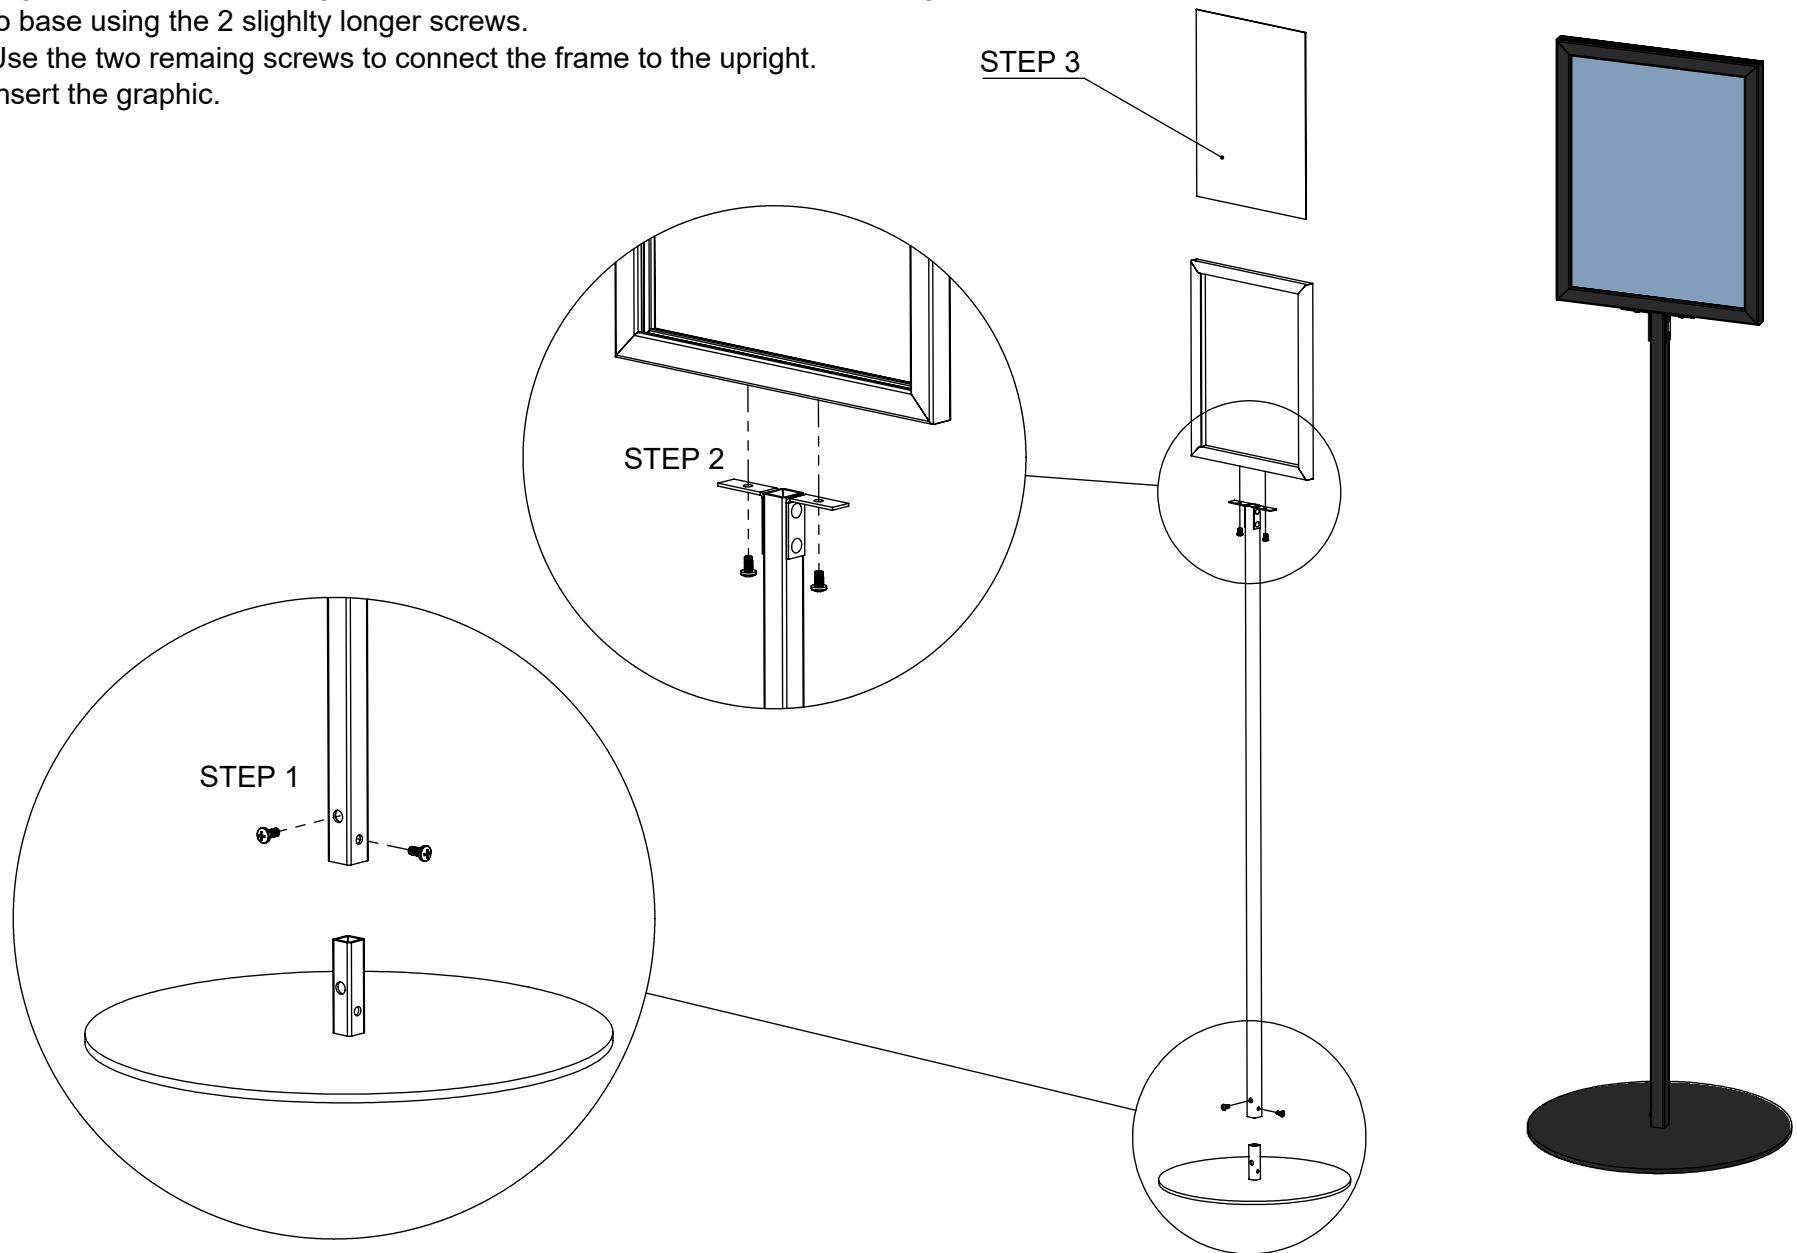

PA3S-RD-X-B shown