


Exhibitor Products (Pop-Up Presto Frames™)

- 1. Lay pop-up frame on ground (fig. A-1) and pull straight up to expand (fig. A-2).
- 2. Interlock steel hooks to hold frames securely in place (fig. B).
- 3. Attach graphic to velcro perimeter (fig. C).
- 4. (For units using end panels) Attach end panel bracket to frame using flat-head screws (fig. D).
- 5. (For units using end panels) Wrap graphic around end panel (fig. E).
- 6. (For units that need hubs replaced) To replace hub, detach connected tubes by removing hex nuts and screws (fig. F-1). Then, unscrew hook from hub (fig. F-2). Lastly, replace new hub (installation is opposite of removal).
- 7. Optional Weighted Base (fig. G): Option1: Connect the base through the holes on the crossbars using the knobs provided. Option 2: Place the C-Clamp around the crossbars, then fasten the clamps to the base with the Phillips screws provided.
- 8. For Velcro Installation on frame: Attach the Velcro with a built in Connector to the threaded rod of the steel hook (fig. H).


NOTE: Unit may differ from model shown below, but assembly is the same.

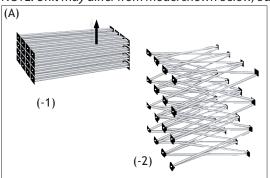


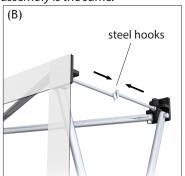

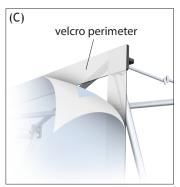



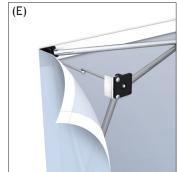

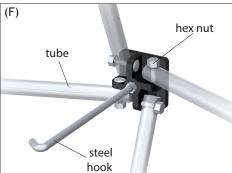

Applicable Products:

PFK Series

